

 
DYNAMIC SOUND & VISUAL EXPERIENCE

MAGICSING USER'S MANUAL

ALL-IN-ONE KARAOKE
ED-9000

Thank you for your purchase

Please read this carefully before using your MAGICSING.

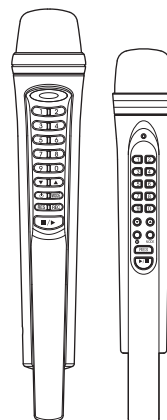

Congratulations on your purchase of this Enter-Tech, MAGICSING.

With this karaoke system, You can enjoy your singing.

Bring your people together!

Spotlight your talent! anytime! anywhere!

CONTENTS

Chapter 01. Introduction

Specifications	01-01
Precautions	01-02
Basic Items & Optional Items	01-03

Chapter 02. How to Setup your MAGICSING

How to connect to a TV	02-01
How to connect to a TV & Stereo / Sound system	02-01

Chapter 03. Functions and Settings

ED-9000 Functions	03-01
Menu	03-02

Chapter 04. Optional Items

Wireless Sub Microphone	04-01
Additional Song Pack	04-02
Recording Pack	04-03

Chapter 05. Additional Information

Caution	05-01
Trouble Shooting	05-02

Chapter.01 - Introduction

MAGICSING KARAOKE IS...

A portable, easy to use, karaoke machine built into a single lightweight microphone. Just plug into your TV and sing anywhere.

SPECIFICATIONS

ED-9000 MAIN KARAOKE

· Model NO.	MAGICSING ED-9000
· Battery	AC adaptor (DC 8V / 500mA)
· Sound Engine	SAM2133
· Dimension	45(W) x 45(H) x 260(D) mm
· Weight	478g (Including Cable)
· TV Channel	Video Channel (NTSC / PAL)
· Image Color	True Color / 720 x 480 (Interface)
· Overflow (Under 10V)	Built-in Protection Circuit for Reverse Voltage
· Operating Temperature	-20°C ~ 65°C (-4°F ~ 149°F)

EX-9700/9800/9900 SUB KARAOKE / Wireless Microphone

· Model NO.	MAGICDUET EX-9700 / 9800 / 9900 Series
· Frequency	FM 700 ~ 900 Mhz
· Battery	AA Batteries x 2
· Dimension	40(W) x 242(H) x 40(D) mm
· Weight	150g (Excluding Batteries)
· Wattage	90mA / 216mW
· Operating Temperature	-20°C ~ 65°C (-4°F ~ 149°F)

PRECAUTIONS



Use only the adaptor included with the MAGICSING. There are many adaptors that are plug compatible with the jack of the MAGICSING, but have different electrical specifications. These adaptors would work only for a short period of time but would very soon damage the MAGICSING.



Do not drop the MAGICSING. Any sign of cosmetic or internal damage due to dropping is not covered under the warranty.



Do not insert or remove Song Chips while the MAGICSING is still powered on.



Do not store the MAGICSING in the direct sunlight, in a high temperature, or high humidity area.



Do not use strong chemical solutions when cleaning.



Do not press on the LCD or LED part.



Never use a sharp object on the keypad.



In case the MAGICSING was stored in a high temperature setting, allow sufficient time to cool down before using the MAGICSING.

 


Do not immerse in water or splash water on MAGICSING, water damage is not covered under warranty.




Do not take apart the MAGICSING. This will void the warranty.

BASIC ITEMS

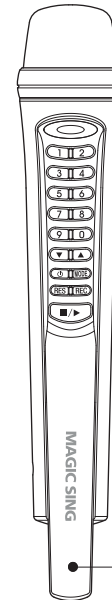

ED-9000 MAIN KARAOKE

 Carry Bag

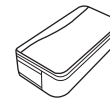

Song List with
User's Manual



MIC Stand



AC Adaptor



BASIC ITEMS

· ED-9000 Main Karaoke

 
· User's Manual

· AC Adaptor 8V

· Songlist Book

Introduction - Chapter.01

OPTIONAL ITEMS



Wireless Sub Karaoke

 
Enhance the fun with a second Wireless Sub-MIC.

Additional Song Pack

You can add additional song chips to your collection.
(Refer to Chapter.04-02)

Recording Pack

You can record your own songs using this.
(Refer to Chapter.03-03)

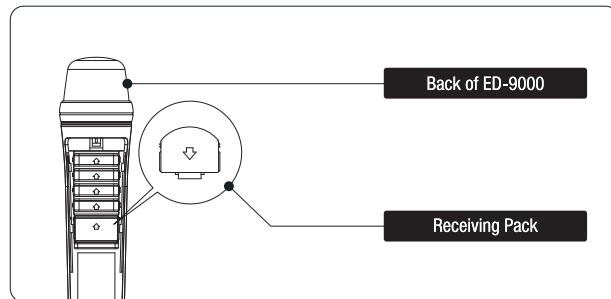

Back of ED-9000


Receiving Pack

OPTIONAL ITEMS

- Wireless Sub Microphone
- Recording Pack
- Car-Adaptor
- Receiving Pack
- Additional Song Pack


Chapter.02 - How to Setup your MAGICISING

 HOW TO CONNECT TO A TV

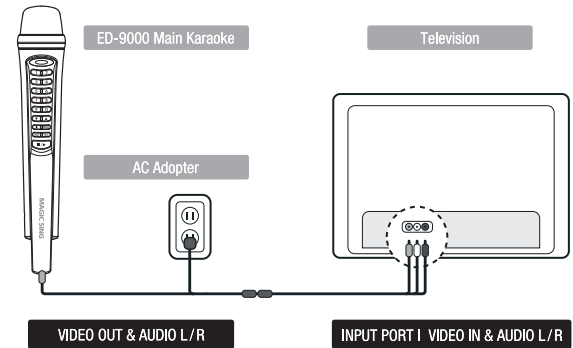


Connect AV cable to RCA jack terminals in your TV as shown above.
If there are only two RCA jack terminals in your TV (Mono TV), then please connect the Yellow jack (Male) into the Yellow RCA jack terminal and connect the White jack (Male) into the other RCA jack terminal of your TV.

 HOW TO CONNECT TO A TV & STEREO (SOUND SYSTEM)

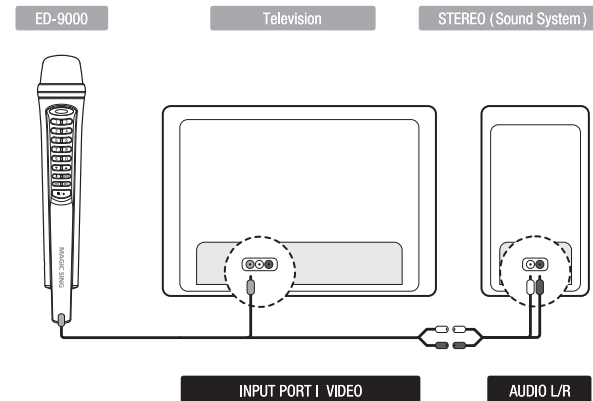

MAGICSING ALL-IN-ONE KARAOKE

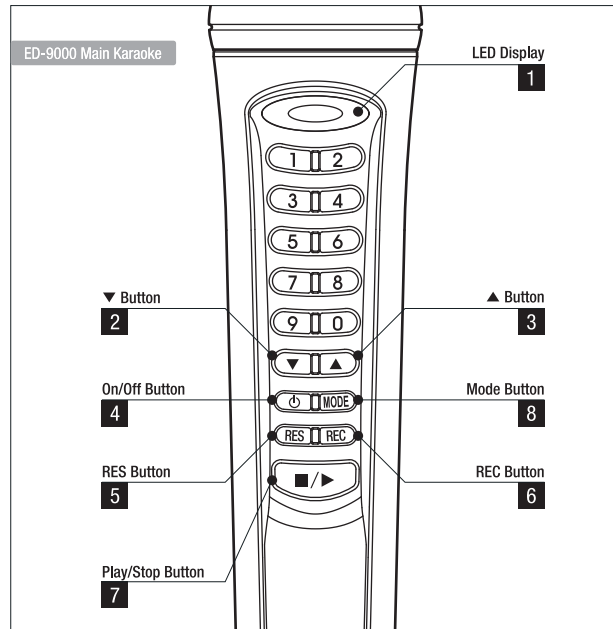 

1 LED Display
Display power ON / OFF

2 Up/Down Button

3 Scroll up&down from the current song to key, tempo, microphone volume, music volume, echo, etc.

4 Power Button
The power button ON & OFF

5 RES Button **RES**
It is used to pre-select (Reserve) songs. Select a song number, then press the RES Button (MAX.20 songs but displays only 5 songs)
If you select the next song using this button, it will start when the current song ends.

6 REC Button **REC**
Press MODE buttons, then press the REC buttons to start recording
Press ■ / ▶ buttons to stop recording
Press REC buttons to start playback
Press ■ / ▶ buttons to stop playback

7 Play / Stop Button 
Press once to play, again to stop

8 Mode Button
To display the functions of MENU & Configuration

MODE + 1 MIC Vol
(You can adjust the MIC volume with 15 levels by using the ▲/▼ Buttons)

MODE + 2 Music Vol
(Allows you to set the volume of the music, by using the ▲/▼ Buttons)

MODE + 3 Echo
(Allows you to adjust the MIC echo with 15 levels by using the ▲/▼ Buttons)

MODE + 4 Key
(Allows you to adjust the MIC key with 15 levels by using the ▲/▼ Buttons)

MODE + 5 Tempo
(Allows you to set the tempo, using the ▲/▼ Buttons)

MODE + 6 Sub MIC ON / OFF
(Sub microphone ON & OFF)

MODE + 7 Sub MIC Vol
(You can adjust the Sub MIC volume with 15 levels by using the ▲/▼ Buttons)

MODE + 8 Melody
(Allows you to set the volume of the guide melody, using the ▲/▼ Buttons)

MODE + 9 Contest
(Plays songs at random. It is fun to play games by diving people into 2 teams.
To stop the game, press the MODE button)


MODE + 0 Continuous Play
(Song will be played automatically one after the other until you stop the play)




CONFIGURATION

1	SUB MIC	ON / OFF
2	SCORE CHECK	OFF / AMA / PRO / STAR
3	LYRIC LINE	AUTO / 2 / 3 LINES
4	LYRIC FORMAT	CENTER / LEFT-RIGHT / MIX ALL
5	REAL TIME SCORE	ON / OFF
MODE	EXIT	

 WIRELESS SUB KARAOKE

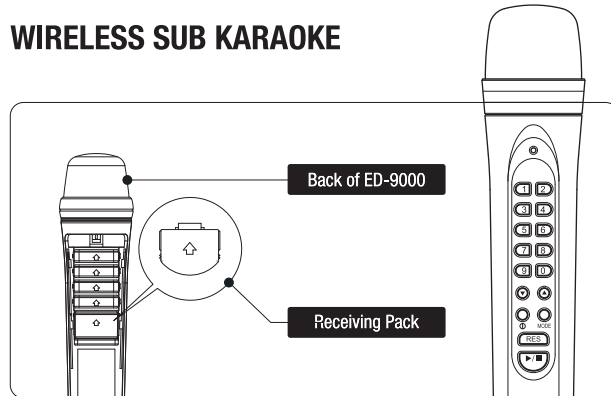

- 1 Open the back cover of main karaoke, then plug the receiving pack as in the picture shown above.
- 2 When pressing the **MODE** + **6** button of the main karaoke, the monitor will display the sub karaoke ON, and it will begin to function the channel.
- 3 Open the back cover of the sub karaoke, insert two AA batteries and press the power button. The green LED light will be on and, it will start to function.
- 4 **▲/▼ Button (up/down)**
Scroll up and down from the current song to adjust key, tempo, microphone volume, music volume, echo, etc.
- 5 **RES Button** 
Allows you to reserve songs (Maximum 20 but displays only 5).
If you select the next song using this button, it will start when the current song ends.

- 6 **POWER Button** 
The power button ON & OFF

- 7 **Play / Stop** 
Press once to play, again to stop.

! When the red LED light is on, the batteries need to be replaced.

 
! If you want to stop using the sub karaoke, press the **MODE** + **6**
The monitor will show the sub karaoke OFF again, and it will stop

ADDITIONAL SONG PACKS


You do not have to stick with the built in songs only, you can add additional song packs to your collection.

HOW TO SETUP THE ADDITIONAL SONG PACK


Turn OFF the power. It is very important to power off first before removing or adding any additional song pack.

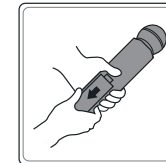

 - Please turn off the power of the MAGIC SING.
- Press down the back cover of MAGIC SING as an arrow then remove the back cover.

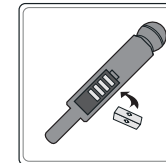


 - Please make sure that the arrow direction of song pack is pointing upward when you insert the song pack.
(Additional 4 song packs can be inserted.)

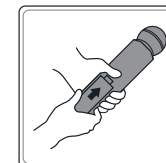

- After song pack is inserted then close the back cover as normal.
- Please turn on the power of the MAGIC SING.

 
HOW TO ADD THE SONG LIST

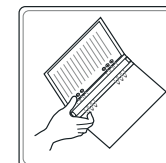

- Press the top and bottom metal tab of the binder to open the binder rings.
- Insert the new song list between the binder rings.
- Close the binder rings.

RECORDING PACK

 You can record your own singing into the Recording Pack.

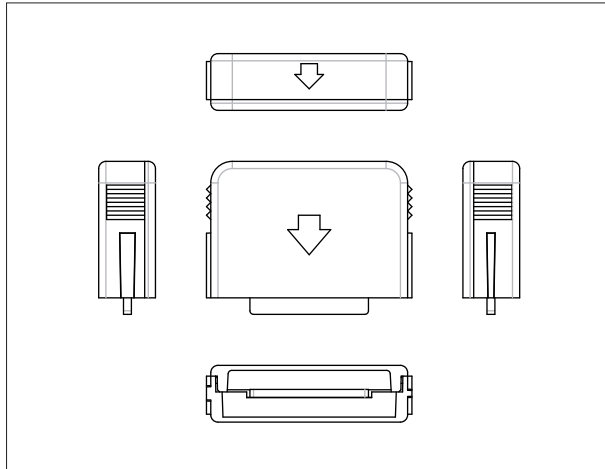

Turn off the MAGICSING : The MAGICSING should be turned off first.

Insert the Recording Pack into the slot on the back of the MAGICSING.

Turn on the power of the MAGICSING then select a song number then press the REC (recording) button on the remote-control.

To stop recording, press the REC (recording) button on The Remote-control or the MAGICSING. ■/▶ button can be used as the stop button.

To replay the recorded songs, press the RES button on Remote-Control then your recorded songs are listed up on the screen then select your desirable song by using ▼/▲ buttons then press the ■/▶ button.

To stop the playback, press the ■/▶ button.

To delete recorded songs, first press the RES button then Recorded songs are listed up on the screen then select the song by using ▼/▲ buttons then press the RES (reservation) button.

You cannot record your own singing on the memory of the MAGICSING while you are recording your singing on to the recording pack.

You cannot record your own singing from the middle of song being played. Although you press the REC button in the middle of song, the song will start at the beginning..

In case of additional recorded Song Pack and downloaded Song Pack, those of songs can not be deleted without recorded song chips. Please use the Duet-Mic with them.

The Recording Pack can be used to record about 50 minutes of songs. (about 10 songs)

The Tempo and Key do not work on playing recorded songs.

The recorded song quality is just normal.

Additional Information - Chapter.05

CAUTION

Please do not use the MAGICSING if you think it is having difficulties.



If you smell something weird, the MAGICSING begins to smoke or makes a strange noise, please pull out the USB cable, turn off your PC immediately and unplug the MAGICSING from the power outlet.



Do not place the MAGICSING in locations that are
- Very humid (moisture), dusty or dirty, extremely hot or cold.



Do not plug in if the MAGICSING is wet. Immediately contact the service center. If any solid object or liquid gets inside of MAGICSING, unplug it and have it checked by a service center.



Do not disassemble or repair or modify the MAGICSING by yourself.



Do not place heavy objects on MAGICSING, do not drop the MAGICSING, do not throw the MAGICSING.



Please do not use strong chemicals to clean the MAGICSING, as these chemicals may damage the unit. Keep the MAGICSING away from Pets and small Children.

USE THE RECOMMENDED ACCESSORIES ONLY

Do not use the different adapter when using it, that may cause damage to the product.

DC 8V / 500mA

Chapter.05 - Additional Information

TROUBLE SHOOTING

In case of problems please check the following recommendations

If MAGICSING doesn't power up

A. When you are using the adaptor

Please make sure the adaptor is plugged into the power outlet correctly. Check that the male plug if it is properly inserted into the female jack.

B. When you are using the battery

Please check if the battery type is AA. and If battery life is low, MAGICSING may not power up or work properly.

If the user's voice could not be heard

Press MIC button and check the volume of the main microphone.

If the TV does not show pictures or sound

Make sure all the AV connections are properly connected according to the correct colors. Check if the TV is already in the video mode.

When the TV screen stays still and the MAGICSING won't turn off

Press the power button for 3 seconds or longer to turn off the MAGICSING.

When the video does not show properly

To convert to PAL mode, press and hold button 8, Do not release this button yet. Using another finger press and release power button. Do not release button 8 until the word PAL appears on the TV screen. To convert to NTSC mode, press and hold button 9, Do not release this button yet. Using another finger press and release power button. Do not release button 9 until the word NTSC appears on the TV screen.

If there is any doubt about the product's performance

Press and hold the 0 button, Do not release this button yet. Using another finger press and release the power button. Do not release the 0 button until the words "USER RESET" appears on the TV screen.

When the External Video Input function does not work

Make sure the External Video Pack is properly placed in its slot adjacent to the duet receiver Slot. (※ This function is optional)

